


# Gas Concrete Nailer


## **Toua**® GSN50

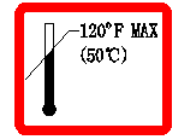

# Cleaning Reference Guide




Remove Four Head Screws

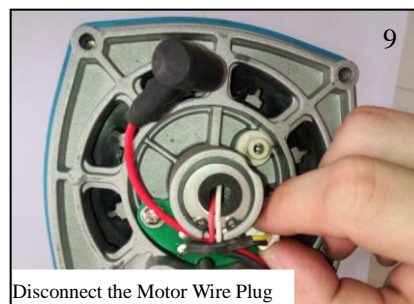

Disconnect the Motor Wire Plug




Disconnect The Spark Cap Plug

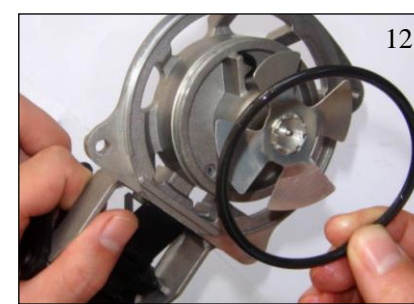


Clean O-ring with a lint free cloth



Use a lint free cloth to clean the dirt

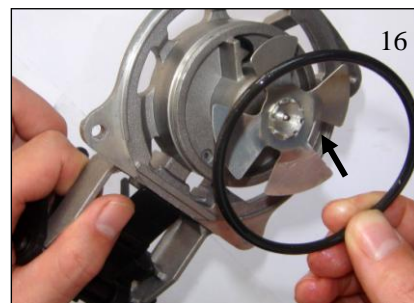



Use only appointed Gas Nailer Lubricating Oil

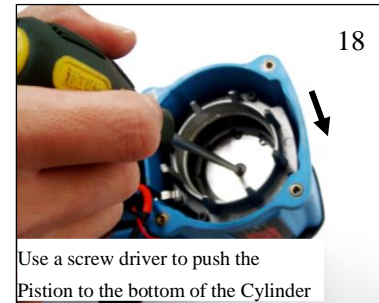


Use a screw driver to push the Piston to the bottom of the Cylinder




Clean dirt in Chamber Use a lint free cloth

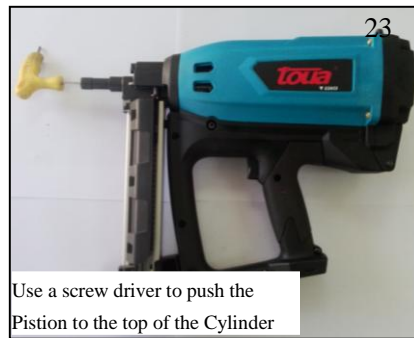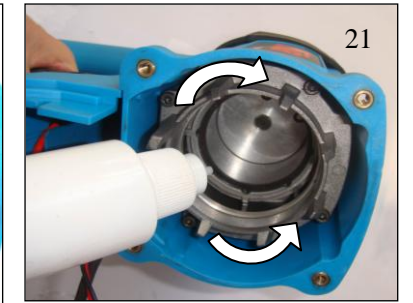

Use a screw driver to push the Piston to the top of the Cylinder

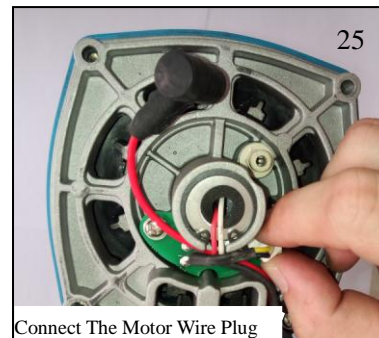

Connect The Motor Wire Plug

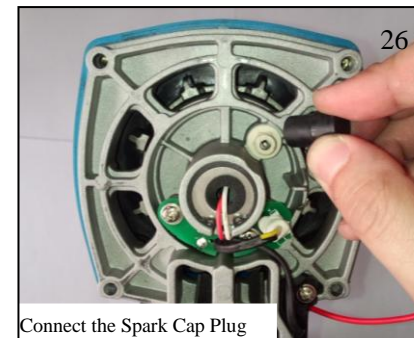

Connect the Spark Cap Plug



Tighten Four Head Screws



Install Nail Magazine



Warning: read the safety operation manual before use First battery pack and tank gun, no abnormal after test



# Gas Concrete Nailer


**Toua**® GSN50



## Cleaning Reference Guide



### The Nail Seat Assembly Disassembly

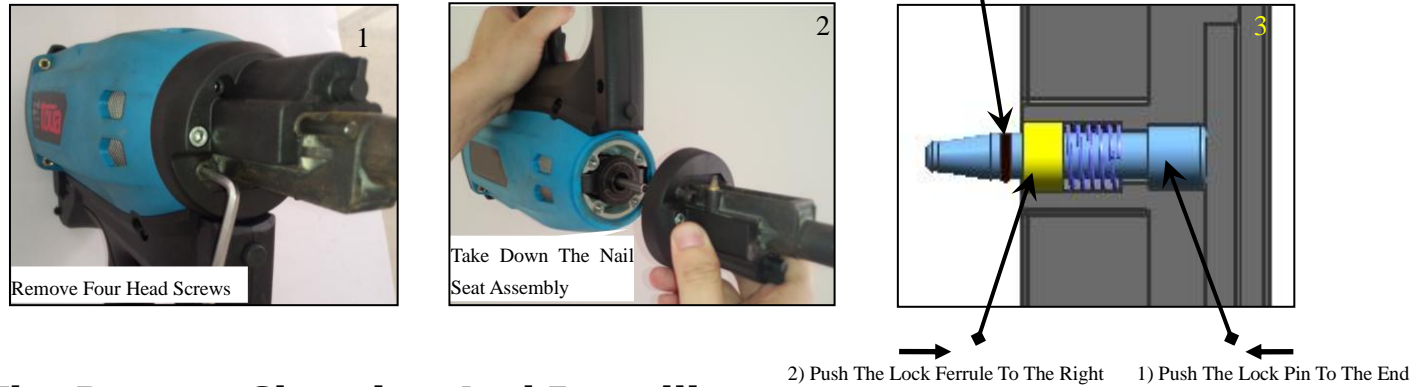

### Loading Nails



### The Battery Charging And Installing



### Testing The Nailer




### Insert The Fuel Cell Into Nailer



### Nail Jam Remove



### Nailing depth adjustment

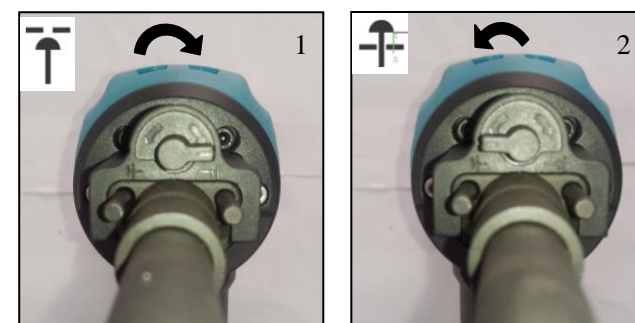

### Wiring Connected

